

instructions
HD Street Footrest kit (20630I)



Installation time : 150 minute

- Tools requirement:
- 1) Allen wrench 2-4-5-6-8 mm.
 - 2) Open-end box 10-13-14-18 mm.
 - 3) Screwdriver
 - 4) Brake Fluid DOT 4
 - 5) Medium Thread Locker
 - 6) Scissor lifter
 - 7) Pliers

ATTENTION!

For disassemble and replacement oem parts use the workshop manual.



Remove brake light switch and hose.



Remove oem right footrest bolt.



Unscrew the bolts that hold the master cylinder and remove footrest.



4

Remove bolt that connects the shifter rod.



5

Remove side stand sensor.



6

Unscrew two remaining bolts that hold the oem left footrest.



7


Remove footrest and unplug side stand sensor.



8

Disassemble side stand as photos.

9

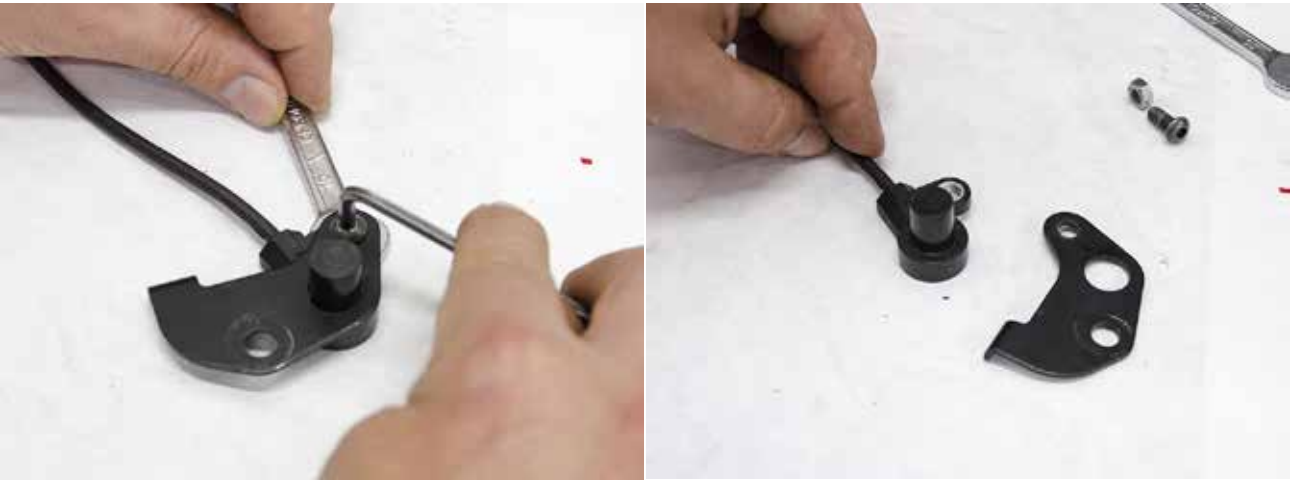

Unscrew and remove bracket from the side stand sensor.

Session: footpegs stud custom kit.



10 Insert bushing and cup springs as photos.



11 Insert footpegs stud as photo.



12 Apply thread lock to M6x25 allen bolt .
Insert and secure as photos.

Check the technical design and make sure you have all the pieces
The technical design will be useful for the following steps.



13


Insert screws M6x25 flathead bolt, apply thread lock and tighten peg.
Pay attention: for custom shift pegs kit will be needed adaptations.



14

Apply threadlocker to two M6x35 threaded pin and screw on shift rod provided.

15

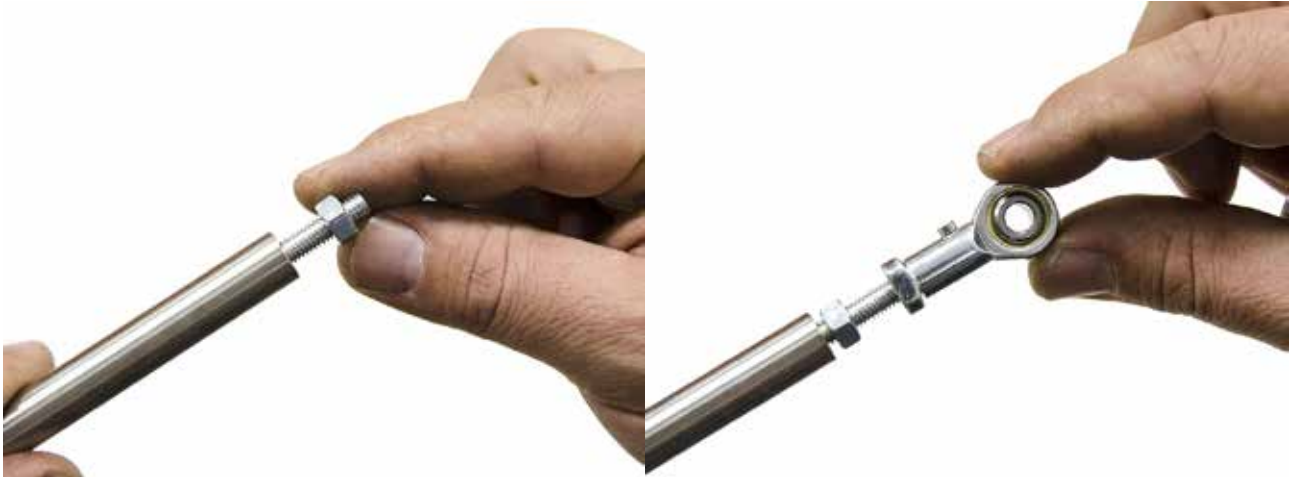

Screw two nuts m6 and female uniball provided.

16



Insert M8x30 allen bolt and apply thread lock.

17




Paying attention to the finish of two sides of pin, screw on **side A**.

18



Insert M8x35 allen bolts and apply thread lock as photo.
Fix support side stand block.

19

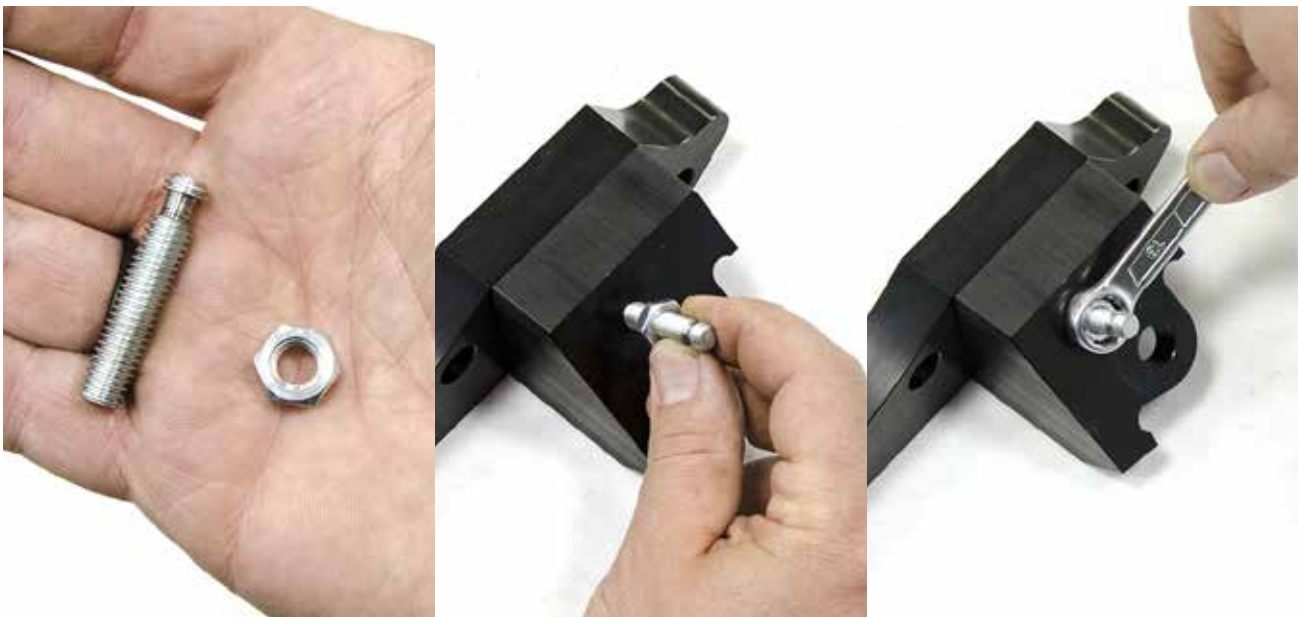

Screw pin as photos, keep outside to 27mm.
Secure with nut.



20

Insert M10x35 allen bolt, apply thread lock and secure footpeg.

Right footrest



21

Insert M10x60 allen bolt as photos.



Apply thickness and enter new master cylinder as photo.
Apply thread lock on M5x25 allen bolt and secure.




22

Apply thread lock and fasten footpeg.



23


Insert M8x30 allen bolt and apply thread lock.

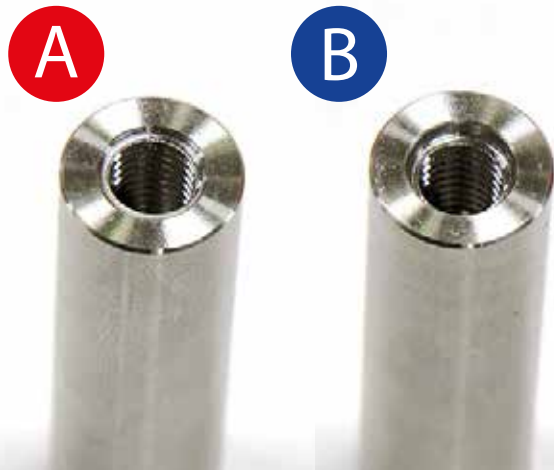

24




Paying attention to the finish of two sides of pin, screw on **side A**

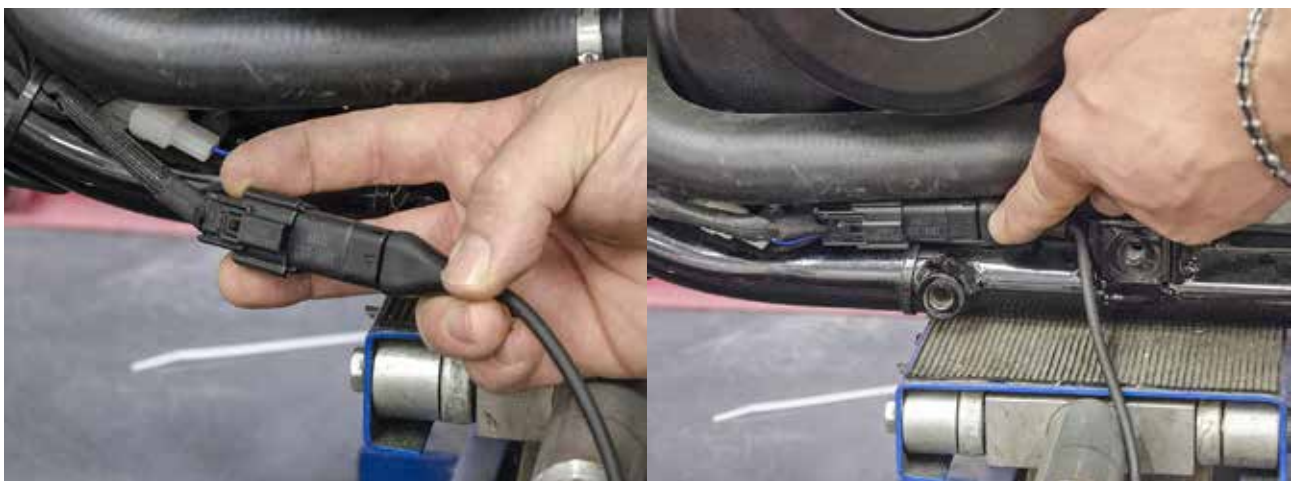

25

Connect side stand sensor.

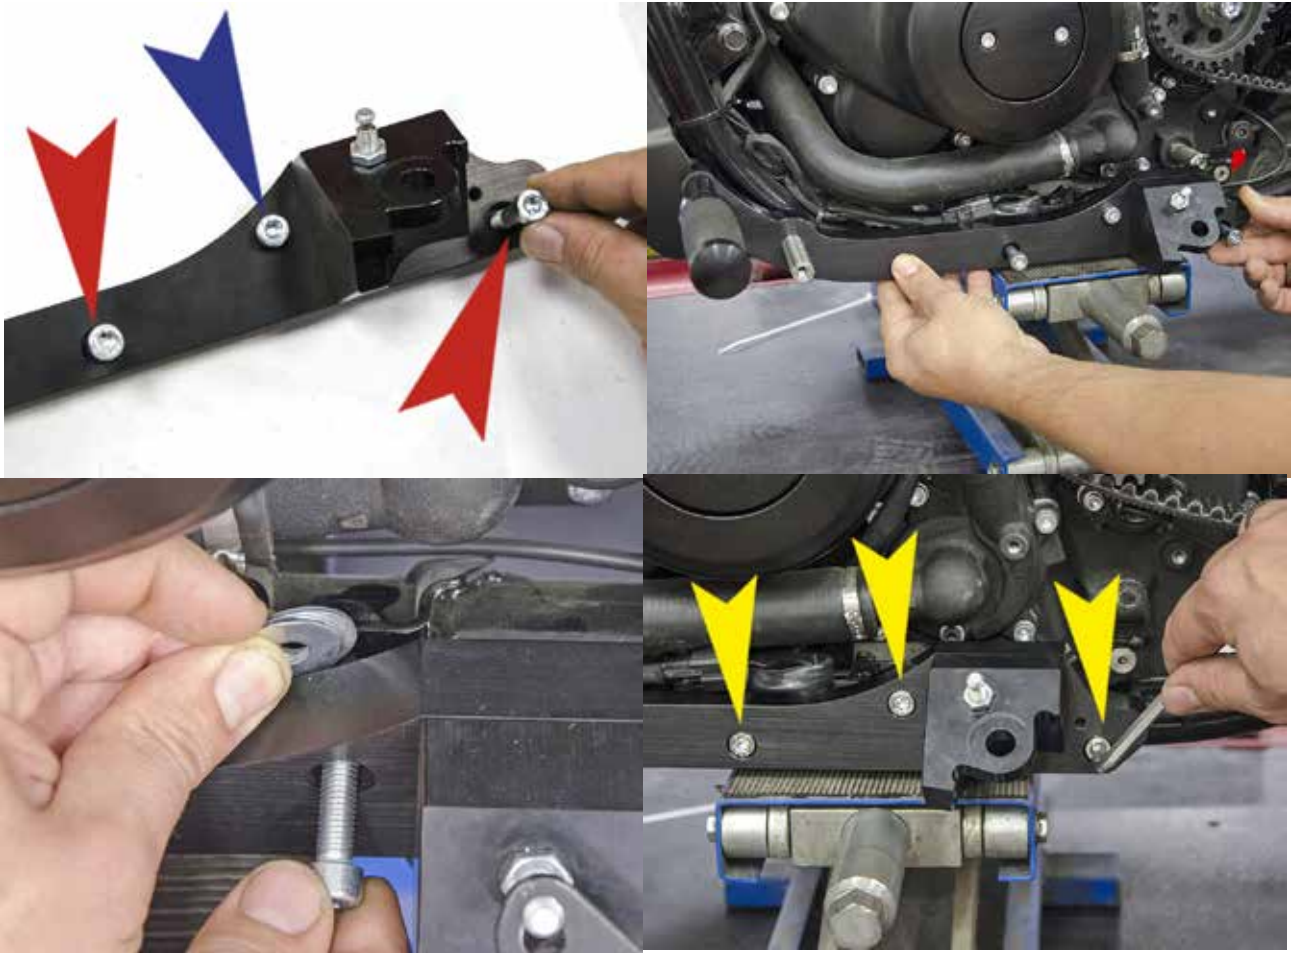

26


Insert two **m8x50** and one **m8x30** allen bolts.
 Place new footrest, check the distance from the attack center on frame, and in case add shims provided.
 Fasten all bolts.



27

Insert **m6x25** buttonhead bolt with washer as photo.
 Add three washers and screw as photo.

28

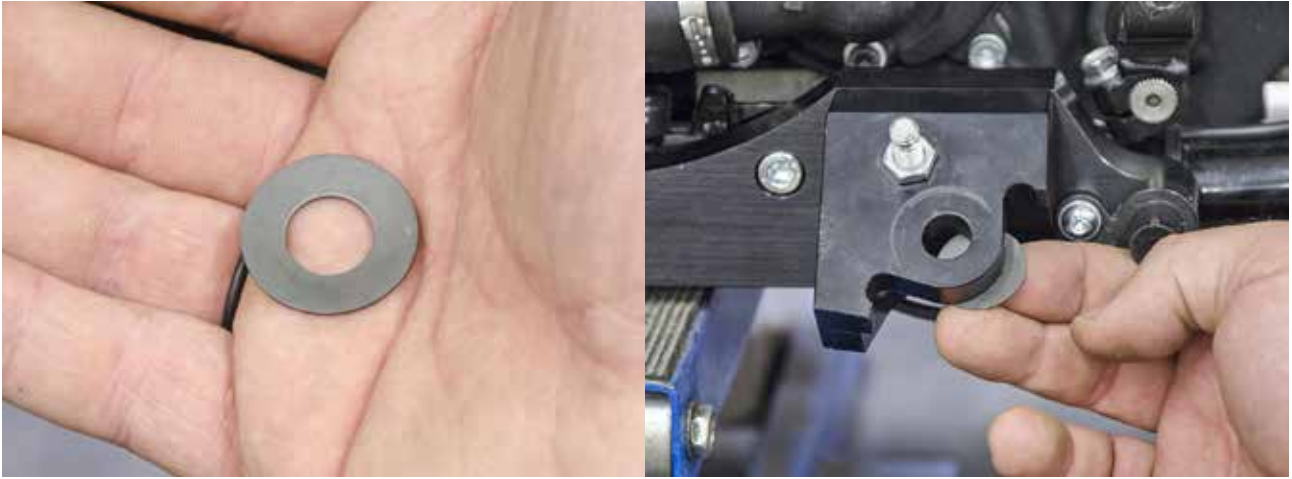

Insert spring cup M12X25 as photos.

29



Attach side stand and secure with pin and snap ring oem.



30

Reassemble side stand spring.



31

Insert shift lever and secure with cap provided.



32

Screw new shift rod.
Insert m6x25 buttonhead bolt as photo.



33

Insert washers as photo and secure with selflock nut m6.




34

Adjust and lock.



35

Insert m8x80 allen bolts as photo.
Place footrest and secure.

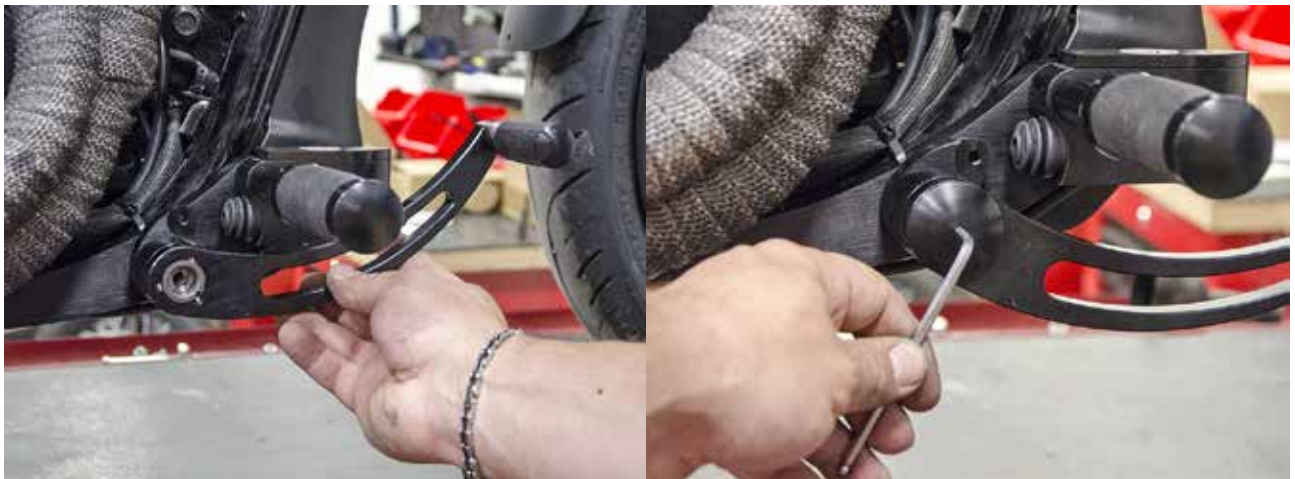

36

Insert brake lever and secure with cap provided.

37




Insert male uniball provided on master cylinder as photo, apply thread lock on m6x20 buttonhead bolt and secure.

To complete the installation
we recommend the purchase:
1 pcs. brake hose 900/950 mm long.
2 pcs. Banjo 45 °
1 pcs. brake light switch
Brake Fluid DOT 4

38



Street Forward Control code 603601

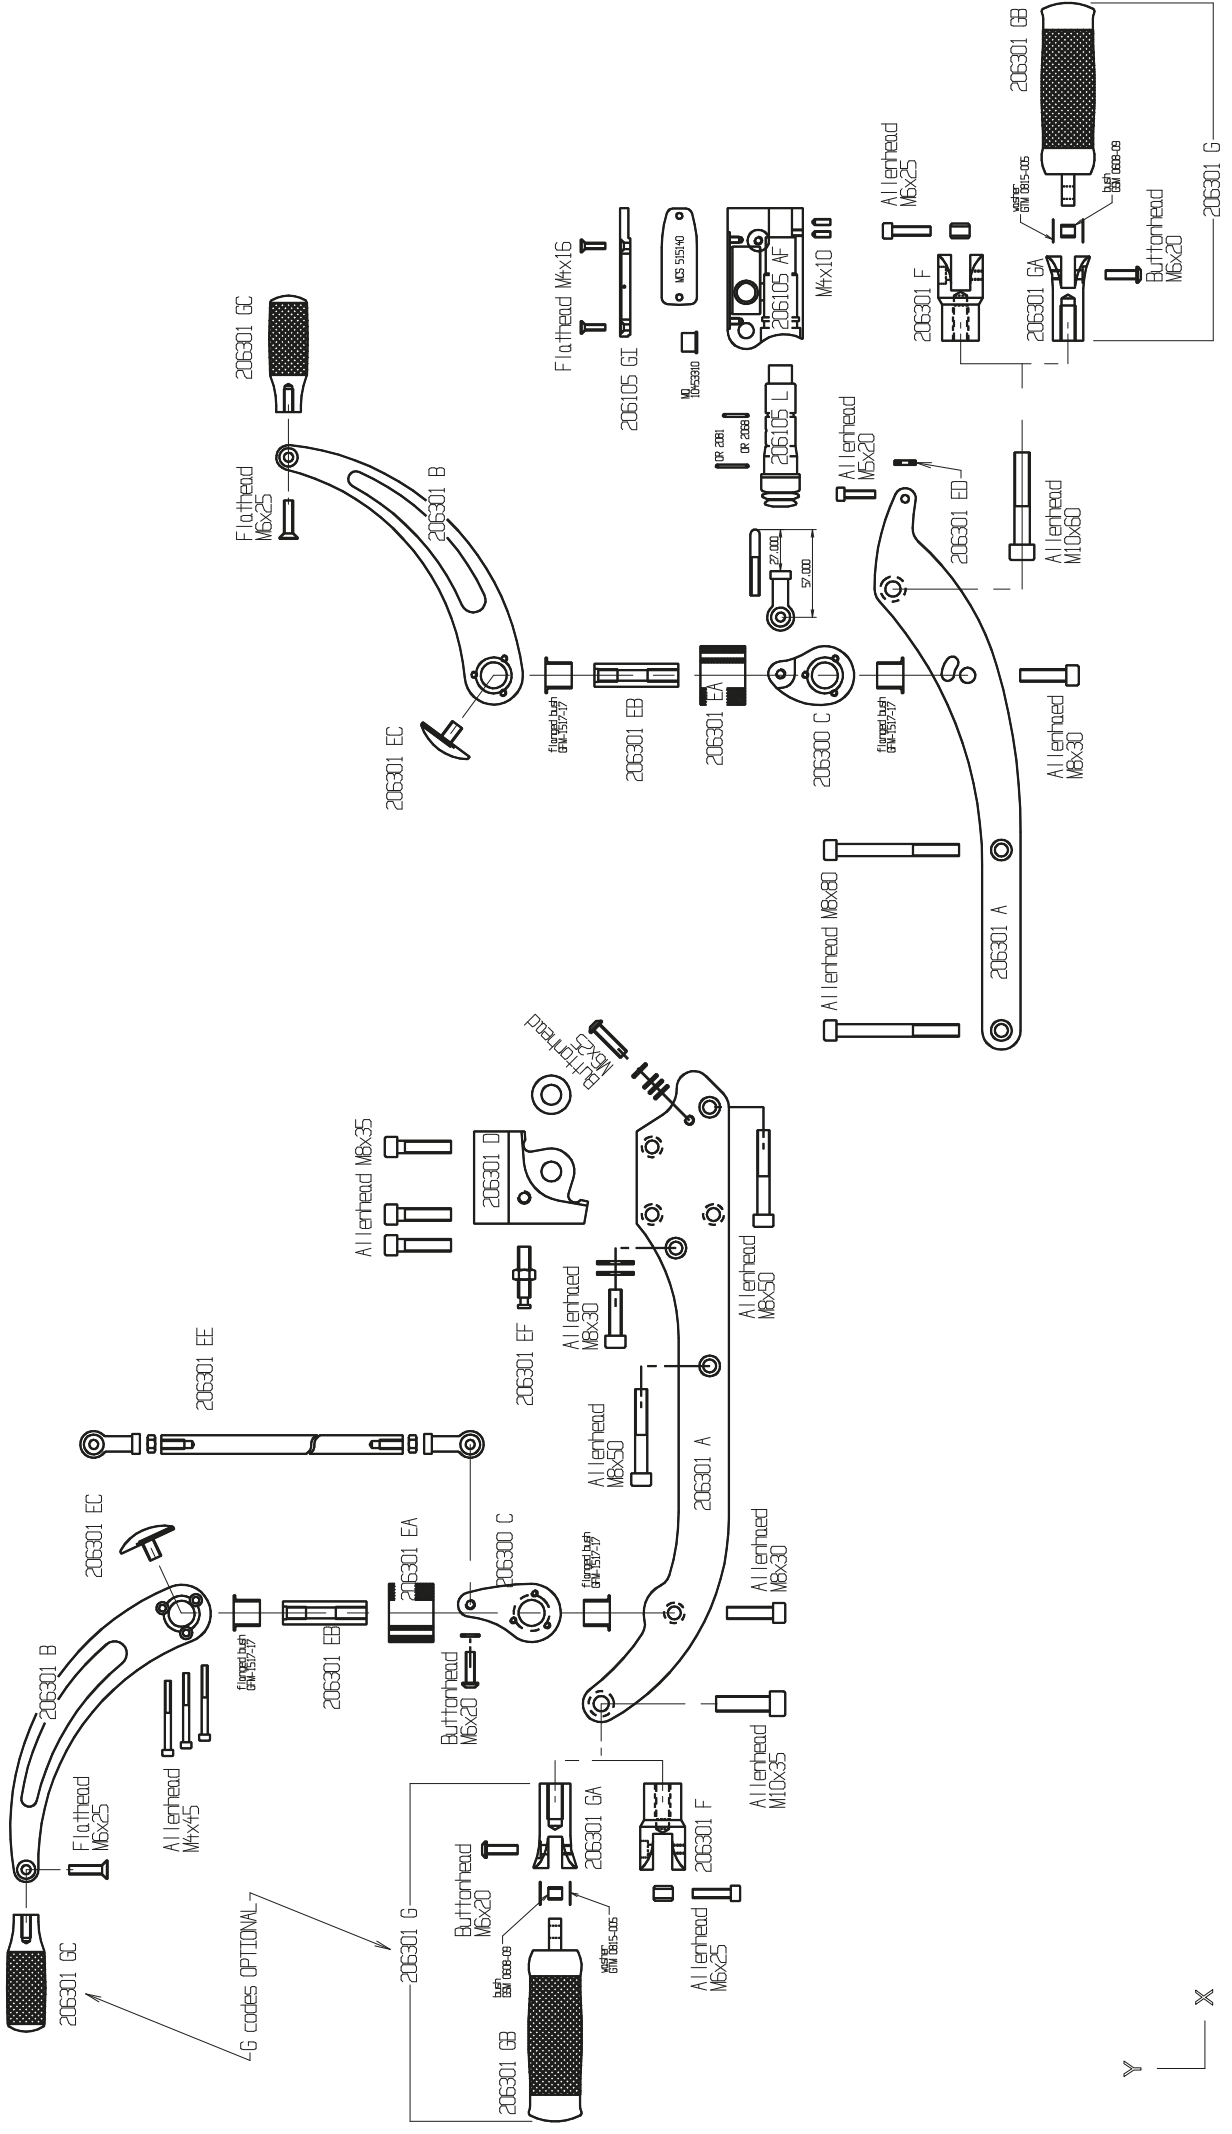



Restituzioni & Difetti

Eventuali reclami devono essere fatti entro 7 giorni dalla data di consegna con preavviso.

Le restituzioni devono essere espressamente autorizzate dalla FreeSpirits per iscritto.

Le restituzioni senza autorizzazione non verranno accettate.

Una tassa del 10% sul valore del prodotto, verrà trattenuta per il ristoccaggio del materiale.

La tassa del 10% non verrà trattenuta se la restituzione è dovuta ad un difetto della merce o ad un errore da parte nostra.

Non si accetta il ritorno di merce manomessa.

Tutte le restituzioni devono essere spedite con trasporto prepagato e accuratamente imballate.

Non verranno assolutamente accettate le restituzioni a nostro carico.

FreeSpirits srl rilascerà un credito per la restituzione della merce del valore del prezzo di acquisto da utilizzarsi su ordini futuri.

Reclami

Prima della spedizione le nostre merci vengono attentamente controllate e accuratamente imballate. Tutti i reclami per danno o smarrimento durante il trasporto devono essere direttamente inoltrati dal cliente al corriere che ha effettuato il trasporto. Di conseguenza è importante opporre immediatamente riserva sul documento di trasporto relativo, onde ricevere eventuali risarcimenti.

FreeSpirits srl non è responsabile dei danni incorsi durante il trasporto.

Garanzia

La nostra garanzia è limitata alla riparazione o alla sostituzione di parti difettate solo entro 7 gg.

dalla data di acquisto. La garanzia non copre i danni per installazione impropria, negligenza, alterazione o cattivo uso.

Non si accetta alcun prodotto danneggiato o modificato a causa di installazione impropria.

Attenzione

La ditta FreeSpirits srl non ha nessuna connessione con i marchi Harley Davidson e Buell, e sono usati solo esclusivamente come riferimenti.

Considerando che alcuni accessori di questo catalogo potrebbero non essere conformi al codice stradale italiano ed estero, si consiglia prima della vendita o installazione, di consultare il codice stradale stesso. FreeSpirits srl responsabilizza inoltre i rivenditori nell'informare l'acquirente prima di vendere o procedere all'installazione degli articoli.

La ditta FreeSpirits srl declina ogni responsabilita' nell'uso improprio dei suoi accessori