



INSTALLATION

LIGHTED SIDE TRIM for TOUR-PAK

7265

PARTS INCLUDED

- 1 Right Side Lighted Tour-Pak Trim
- 1 Left Side Lighted Tour-Pak Trim
- 1 8-Pin Run-Turn Wiring Adapter
- 1 Dielectric Grease Pack
- 2 Alcohol Pads
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

NOTICE

This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

NOTICE

IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.

TOOLS SUGGESTED

Set of Hex Wrenches, Set of Combination Wrenches, Phillips Screwdriver, Cleaning Supplies

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1


Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let cool.

STEP 2

Using soapy water and a clean rag, thoroughly clean the area on both sides of the Tour-Pak above the side light or chrome trim as shown in PIC 1. Rinse and dry completely. Wipe the area with the included alcohol pads to remove any residue. Let dry completely.

NOTICE

Ensure the area of installation is free of grease, oil, dirt or other debris including wax/polish products and bugs to ensure proper adhesion. Kuryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

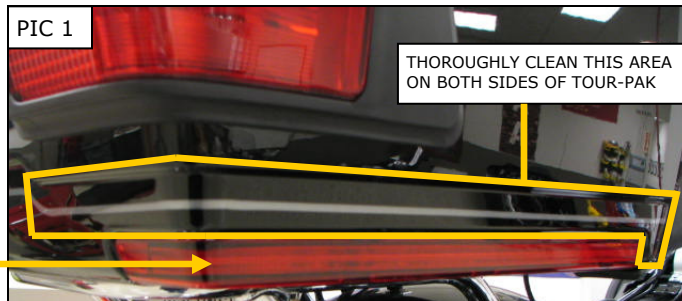

THIS LOCATION HAS A SIDE LIGHT OR CHROME TRIM

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
 - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
 - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



kuryakyn.com

STEP 3 Test fit the right side Trim. Line it up to the body line above the side light or chrome trim of the of the Tour-Pak (PIC 2) making any reference marks with a non-permanent marker or masking tape.

NOTICE The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 4 Rub the backing of the adhesive with the back of your fingernail to activate the adhesive. Remove the backing. Using any reference marks made in Step 3, attach the Trim to the right side. Press in place for one minute. Full bonding will occur in 24 hours.

NOTE: If the motorcycle is to be operated before the 24 hour cure time has expired, use a good quality masking or painter's tape over the Trim to assist in holding the Trim in place until the cure time is over.

STEP 5 Repeat Steps 3 and 4 for the left side.

NOTICE Küryakyn recommends the use of dielectric grease on electrical connections.

STEP 6 Remove the seat and locate the H-D main wiring harness. PIC 3 (On trike models, locate the 8-pin connector from the main harness to the run-turn-brake controller. This is the input side of the controller and the 8-pin connector will have a **RED** wire with a **YELLOW** stripe. It should be located on the left side under the passenger handrail. PIC 3) Separate this connector, place some of the included dielectric grease in each half, and plug the 8-Pin Run-Turn wiring adapter into each end. PIC 4

STEP 7 Remove the Tour-Pak liner from the bottom of the Tour-Pak. Locate the three fasteners that attach each speaker housing to the Tour-Pak. PIC 5 Loosen all six fasteners to allow enough room for the wire harness from each trim to be routed between the speaker housing and the Tour-Pak.

STEP 8 Route the wire harnesses from each Lighted Trim behind each speaker housing to the wiring adapter just installed. Secure the harnesses out of harms way using the included cable ties. Tighten the fasteners **making sure the wires are not pinched**.

NOTICE Secure all wiring away from any moving parts, pinch points or extreme heat. Küryakyn **WILL NOT** issue a warranty on any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.

STEP 9 Place some of the included dielectric grease on each connector. Connect the three pin connector on the wire harness from the **LEFT** lighted Trim to three pin connector on the 8-Pin adapter with the **PURPLE-BLACK-BLUE** wires. Connect the three pin connector on the wire harness from the **RIGHT** Lighted Trim to the three pin connector on the 8-Pin adapter with the **BROWN-BLACK-BLUE** wires. PIC 4

STEP 10 Turn the bike on and test that all lights function correctly. Replace the seat.

WARNING ENSURE PROPER LIGHT OPERATION BEFORE RIDING THE MOTORCYCLE. VISIBILITY IS A MAJOR CONCERN FOR MOTORCYCLISTS. A LIGHT MALFUNCTION COULD RESULT IN DEATH OR SERIOUS INJURY.

WARNING AFTER INSTALLING THE SEAT, PULL UP ON IT TO ENSURE IT IS LOCKED INTO PLACE. A LOOSE SEAT CAN SHIFT AND CAUSE LOSS OF CONTROL RESULTING IN SERIOUS INJURY OR DEATH.

