



INSTALLATION

L.E.D. REAR BUMPER INSERT

7751

PARTS INCLUDED

- 1 L.E.D. Rear Bumper Insert
- 1 Hardware Kit Containing
 - 2 #10-24 X 5/8" Hex Head Cap Screws,
 - 2 #10 Lock Washers
- 1 Back Clamp
- 6 4" Black Nylon Cable Ties
- 1 Dielectric Grease Pack
- 1 8 Pin Wiring Pigtail
- 4 Cord Keepers
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

TOOLS SUGGESTED

Set of Combination Wrenches, Flat Blade Screwdriver

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let cool.

WARNING! YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

STEP 2 Remove the rubber insert from the rear bumper by pushing inward. PIC 1 There is a center brace on the backside bumper that helps hold the rubber insert in. You will need to work the rubber insert to the side around this.

-cont.-

7751-21HD-0811



CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
 - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
 - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.

• Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.

kuryakyn.com



STEP 3 Insert the LED Rear Bumper Insert through the outside of the bumper. Attach the clamp to the back of the Insert with the included #10-24 Hex Head Cap Screws and #10 Lock Washers. The clamp will go around the center brace of the bumper and sandwich it between the clamp and the Insert. PIC 2

NOTE: The inner part of the clamp is angled to follow the angle of the brace. Make sure the thickest part of the clamp is at the bottom.

STEP 4 Remove the left saddlebag and the seat from the motorcycle.

STEP 5 Route the wire to the saddlebag brace, then up the outside of the rear fender to under the seat. PIC 3 Use the included cord keepers to secure the harness to the side of the fender.

ATTENTION! Secure all wiring away from any moving parts, pinch points or extreme heat. Küryakyn WILL NOT issue a warranty on any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.

STEP 6 Locate the wire harness for the rear fender lights and unplug the connectors. PIC 4

ATTENTION! Küryakyn recommends the use of dielectric grease on electrical connections.

STEP 7 Plug the included 8 Pin Wiring Pigtail into the fender wire harness. If you have any type of run-turn-brake controller, the harness needs to be installed ahead of it. PIC 5

CAUTION! Install the LED Rear Bumper Insert wire harness ahead (upstream) of any rear lighting controller that may be installed on the bike.






STEP 8 Plug the LED Rear Bumper Insert into the matching connector on the wiring pigtail. PIC 5

STEP 9 Secure the extra wire up and out of harms way with the included nylon cable ties.

ATTENTION! Secure all wiring away from any moving parts, pinch points or extreme heat. Küryakyn WILL NOT issue a warranty on any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

WARNING! ENSURE PROPER LIGHTING OPERATION BEFORE RIDING THE MOTORCYCLE. VISIBILITY IS A MAJOR CONCERN FOR MOTORCYCLISTS. A LIGHTING MALFUNCTION COULD RESULT IN DEATH OR SERIOUS INJURY.

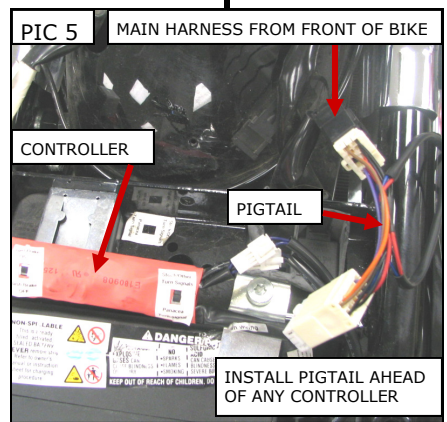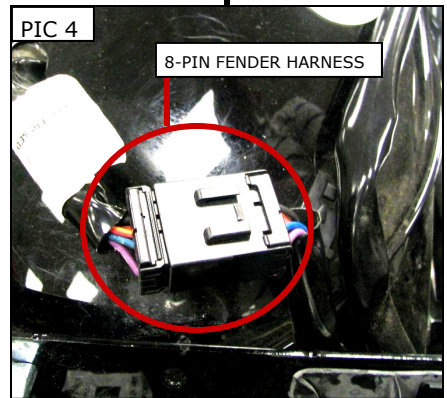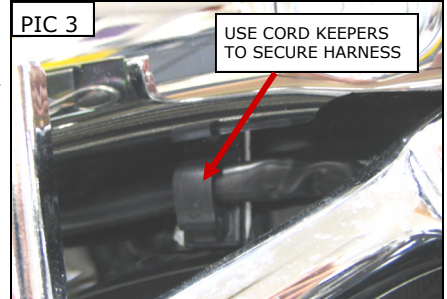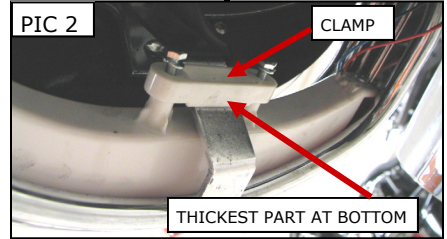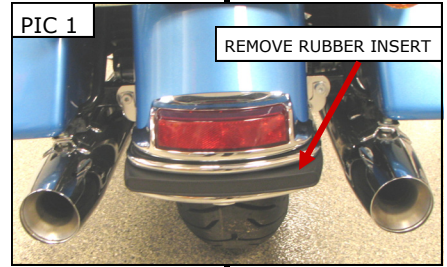

Ride On!