



INSTALLATION

LIGHTED LID ACCENT for TOUR-PAK 7755

PARTS INCLUDED

- 1 Lighted Lid Accent
- 1 Hardware Kit including:
 - 1 Mini 3-Pin Connector
 - 1 8-Pin Wiring Harness with Pigtails
 - 4 Cord Keepers
 - 3 Male Scotch Locks
 - 3 Female Scotch Locks
 - 4 4" Cable Ties
 - 1 Alcohol Pad
 - 1 Dielectric Grease Packet
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

TOOLS SUGGESTED

Drill and Set of Drill Bits, Phillips Screwdriver

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris including wax/polish products and bugs to ensure proper adhesion. Kuryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

STEP 2 Prep and clean the area in which the new Lighted Lid Accent will be applied. Use the supplied alcohol wipe. If it is excessively dirty, use a ammonia based cleaner such as window cleaner and then clean with the supplied alcohol wipe. Wipe dry with a clean rag. PIC 1

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



kuryakyn.com

STEP 3 Place the new light on the tour pak, lining it up evenly between the raised outer edges. Line up and mark the location where the hole for the wire will need to be drilled.

STEP 4 Mark the area with a non-permanent marker or equivalent. PIC

CAUTION! MEASURE TWICE – DRILL ONCE. Double check all reference marks made on the Tour-Pak lid **BEFORE** drilling. Kuryakyn will not be responsible for incidental or consequential damages resulting from this installation.

STEP 5 Using a 1/8" drill bit, drill a hole through the lid at the mark made from Step 4. This will allow a location for routing your wires from the new Lighted Lid Accent.

ATTENTION! Before drilling, make sure contents of Tour-Pak are removed that would interfere with the drilling process.

STEP 6 Route the wires from the lid accent through the lid. Line up the Lighted Lid Accent on the back of the lid making sure that you have even spacing from each side. Make small reference marks to help locate the Lid Accent in the installation process.

ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris including wax/polish products and bugs to ensure proper adhesion. Kuryakyn **WILL NOT** issue a warranty on any parts lost due to improper installation.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.





STEP 7 With the back of your fingernail, rub the adhesive tape backing. Remove the tape backing and using any reference marks made in Step 4 and Step 6. Install the Lighted Lid Accent to the lid applying pressure for one full minute. Full bonding will occur in 24 hours.

STEP 8 From the inside of the Tour-Pak lid, route the wire down toward the lid hinges. Route the wire around to the front hinge and turn it to go into the Tour-Pak base. Secure the wire with the provided cord keepers. PIC 3

STEP 9 Remove the Tour-Pak liner by removing two nuts that are located at the rear of the liner. Set it aside for reinstallation.

STEP 10 Remove the seat screw, take the seat off, and set it aside for later reinstallation.

STEP 11 Take the wire from step 8 and route it through the wiring grommet located at the front left corner of the Tour-Pak. (Viewing from the back of bike) PIC 4

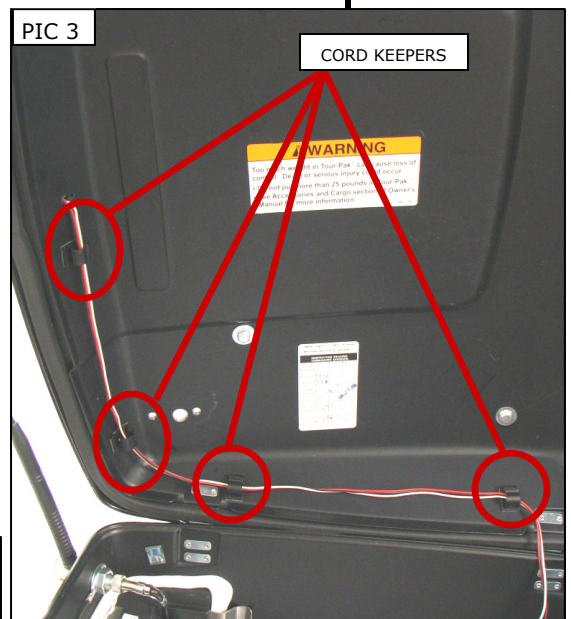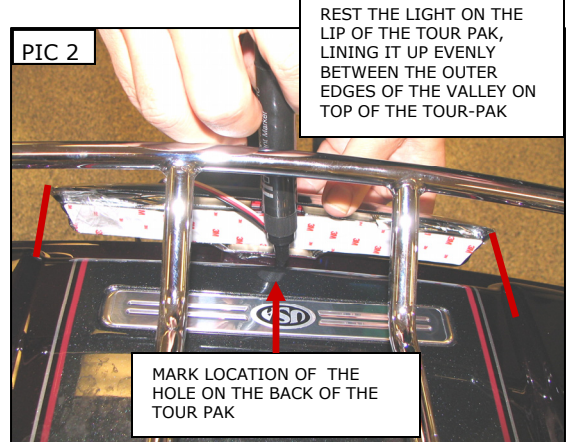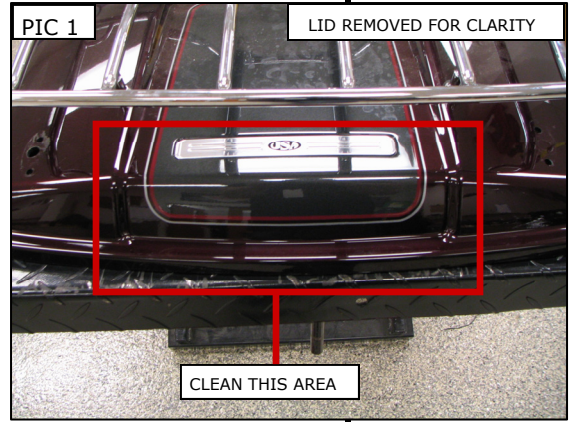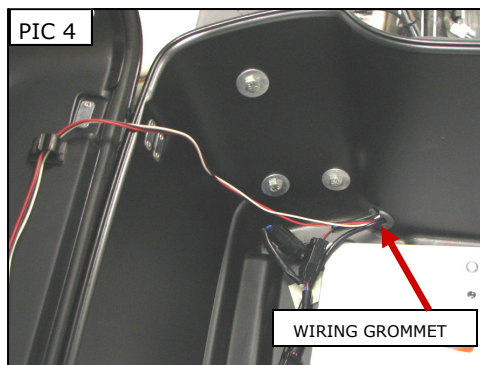

-cont.-

STEP 12 With the wire run through the wiring grommet, insert the three pin terminal connectors into the backside of the provided Mini 3-Pin Connector. Reference PIC 5 for wiring locations and color codes.

STEP 13 Remove the seat and locate the H-D main wiring harness. PIC 6 (On Trike models, locate the 8-pin connector from the main harness to the run-turn-brake controller. This is the input side of the controller, PIC 6, and the 8-pin connector will have a **RED** wire with a **YELLOW** stripe. It should be located on the left side under the passenger handrail.) Disconnect the wiring harness and plug the 8-pin wiring harness with pigtailed into the ends of the main taillight harness. PIC 2

NOTE: If there is a Run-Turn-Brake controller or Panacea installed, the pigtail harness needs to be installed upstream (in front) of the controller.

ATTENTION! Kuryakyn recommends the use of dielectric grease on electrical connections.

STEP 14 Route one of the pigtailed back and connect it to the light connector that was run in step 11. PIC 5

STEP 15 Turn the ignition on and test to make sure that the lights function as both running lights and brake lights. If they do not function, go over all wiring connections.

WARNING! ENSURE PROPER LIGHT OPERATION BEFORE RIDING THE MOTORCYCLE. VISIBILITY IS A MAJOR CONCERN FOR MOTORCYCLISTS. A LIGHT MALFUNCTION COULD RESULT IN DEATH OR SERIOUS INJURY.

STEP 16 Reinstall the Tour-Pak liner and secure it with the stock acorn nuts that were removed in Step 9.

STEP 17 Replace the seat. After all wires have been secured. Make sure no wires or connectors are pinched.

ATTENTION! Secure all wiring away from any moving parts, pinch points or extreme heat. Kuryakyn WILL NOT issue a warranty on any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

