



RUN-BRAKE LIGHTBAR FOR TOUR-PAK, 06-UP

7756

PARTS INCLUDED

- 1 Tour Pak Light
- 1 Hardware Kit:
 - 1 Wiring Pig Tail
 - 3 Cord Keeper
 - 3 Male Scotch Locks
 - 3 Female Scotch Locks
 - 2 Dielectric Grease Packs
 - 4 4" Cable Ties
 - 2 Alcohol Pads
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

TOOLS SUGGESTED

Phillips Screw Driver, Tape Measure, Side Cutter

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

STEP 2 Remove the seat and locate the H-D main wiring harness. PIC 1 (On trike models, locate the 8-pin connector from the main harness to the run-turn-brake controller. This is the input side of the controller, PIC 1, and the 8-pin connector will have a RED wire with a YELLOW stripe. It should be located on the left side under the passenger handrail.) Disconnect the wiring harness and plug the sub-harness into the ends of the main taillight harness.

CAUTION! Always install the Light Bar Harness upstream (before) of any existing multifunction control modules. Do not install the Light Bar Harness between a module and the turn signals, as this will overload the module. Overloading will damage the module and may create a fire hazard!

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
 - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
 - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.

• Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.




ATTENTION! Kuryakyn recommends the use of dielectric grease on electrical connections.

STEP 3 Clean the outlined area of the Tour Pak. PIC 2

ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Kuryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

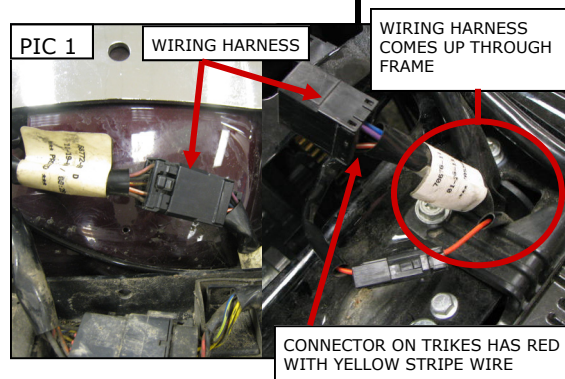


CONNECTOR ON TRIKES HAS RED WITH YELLOW STRIPE WIRE

STEP 4 With a tape measure, find the center of the Tour Pak. PIC 2 Using a piece of masking tape make a non-permanent mark that will help you locate center.

STEP 5 Test fit the light to the Tour Pak, notice how the light fits with the curve of the tour box. Make some small non-permanent marks that will help you line up the light when fully installing to the Tour Pak. Double-check your location, before permanently installing.

STEP 6 With the back of your fingernail, rub the adhesive backing on the backside of the light.

STEP 7 Remove backing and apply the light to the Tour Pak lining up any marks previously made in step 6. Press and hold for one full minute, full bonding will occur in 24 hours.

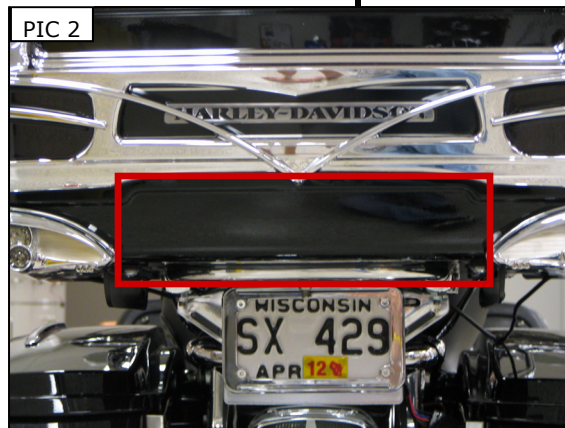

STEP 8 Take the wire and route it along the bottom of the Tour Pak. Run the plug end to the previously installed Wiring Pig Tail adapter.

STEP 9 Use the provided cord keepers and space them evenly to the bottom of the Tour Pak. This will secure the wiring from any possible pinch points and or moving parts. Clean the area before applying the cord keepers.

STEP 10 Connect the light plug end to one of the pigtails end.

STEP 11 Turn the ignition on and test to make sure that the lights function as both running lights and brake lights. If they do not function, go over all wiring connections.

STEP 12 Replace the seat. After all wires have been secured, make sure no wires or connectors are pinched.

WARNING! ENSURE PROPER LIGHTING OPERATION BEFORE RIDING THE MOTORCYCLE. VISIBILITY IS A MAJOR CONCERN FOR MOTORCYCLISTS. A LIGHTING MALFUNCTION COULD RESULT IN DEATH OR SERIOUS INJURY.

ATTENTION! Secure all wiring away from any moving parts, pinch points or extreme heat. Kuryakyn WILL NOT issue a warranty on any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

Ride On!